

Infrared CO2 Sensor Module (Model: MH-Z19C)

User's Manual

(Version 1.0)

Issue Date. 2020.02.04

Zhengzhou Winsen Electronics Technology Co., Ltd

ISO9001 Certificated Company

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Email: sales@winsensor.com
Leading gas sensing solutions supplier in China!

Statement

This manual's copyright belongs to Zhengzhou Winsen Electronics Technology Co., LTD. Without the written permission, any part of this manual shall not be copied, translated, stored in database or retrieval system, also can't spread through electronic, copying, record ways.

Thanks for purchasing our product. In order to let customers use it better and reduce the faults caused by misuse, please read the manual carefully and operate it correctly in accordance with the instructions. If users disobey the terms or remove, disassemble, change the components inside of the sensor, we shall not be responsible for the loss.

The specific such as color, appearance, sizes &etc., please in kind prevail.

We are devoting ourselves to products development and technical innovation, so we reserve the right to improve the products without notice. Please confirm it is the valid version before using this manual. At the same time, users' comments on optimized using way are welcome.

Please keep the manual properly, in order to get help if you have questions during the usage in the future.

Zhengzhou Winsen Electronics Technology CO., LTD.

MH-Z19C NDIR CO2 Module

Profile

MH-Z19C NDIR infrared gas module is a common type, small size sensor, using non-dispersive infrared (NDIR) principle to detect the existence of CO2 in the air, with good selectivity, non-oxygen dependent and long life. Built-in temperature compensation; and it has UART output and PWM output. It is developed by the tight integration of mature infrared absorbing gas detection technology, precision optical circuit design and superior circuit design.

Applications


*HVAC refrigeration *Smart home *Air cleaner device *Ventilation system


Main Features


- *Chamber is gold plated
- *High sensitivity, low power consumption
- *Good stability
- *Temperature compensation, excellent linear output
- *Multiple output modes: UART, PWM
- *Long lifespan
- *Anti-water vapor interference, anti-poisoning

Main parameters

Model No.	MH-Z19C				
Detection Gas	CO2				
Working voltage	5.0 ± 0.1 V DC				
Average current	< 40mA (@5V power supply)				
Peak current	125mA (@5V power supply)				
Interface level	3.3 V (Compatible with 5V)				
Detection Range	400~5000ppm(optional)				
Quitaut signal	Serial Port (UART) (TTL level 3.3V)				
Output signal	PWM				
Preheat time	1 min				
Response Time	T ₉₀ < 120 s				
Working temperature	-10 ~ 50 °C				
Working humidity	0 ~ 95% RH (No condensation)				
Weight	5 g				
Lifespan	> 5 years				

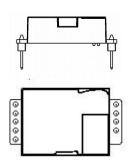

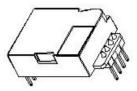

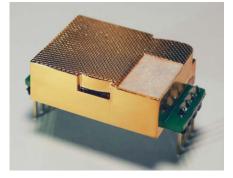

*Indoor air quality monitoring *School


Tel: 86-371-67169097/67169670 Fax: 86-371-60932988


Email: sales@winsensor.com

Detection range and accuracy

Detection Gas	Formula	Detection Range	Accuracy
Carbon Dioxide	CO2	400~2000ppm	± (50ppm+5% reading value)
		400~5000ppm	


Dimensions

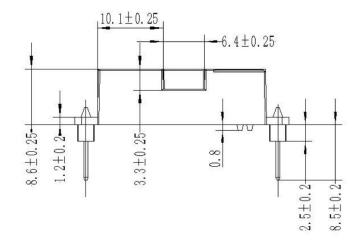

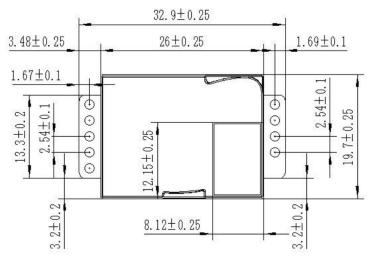

Pins connection type:

Pin	Pin Definition				
Vin	Positive pole of power (Vin)				
GND	Negative pole of power (GND)				
PWM	PWM				
Hd	HD(zero point calibration, low level lasting for over 7s is effective)				
Rx	UART(RXD)TTL Level data input				
Tx	UART(TXD)TTL Level data output				

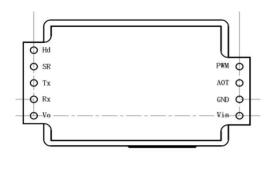


Tel: 86-371-67169097/67169670 Fax: 86-371-60932988

Email: sales@winsensor.com



Output

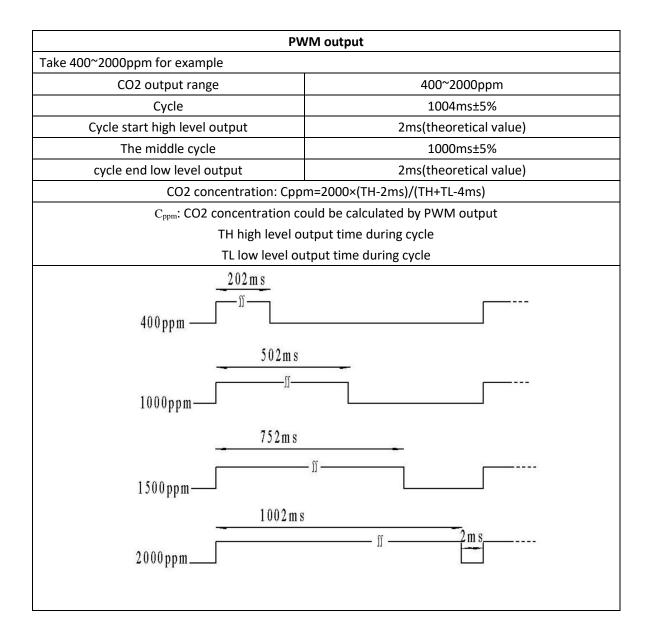

Serial port output (UART)

Hardware connection

Connect module's Vin-GND-RXD-TXD to users' 5V-GND-TXD-RXD. (Users must use TTL level. **If RS232 level, it must be converted**.)

Software setting

Set serial port baud rate be 9600, data bit 8 bytes, stop bit 1byte, parity bit null.

	Commands
0x86	Read CO2 concentration
0x79	ON/OFF Self-calibration function for zero point

d CO2 concen	tration						
mmand							
Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Reserved	Command	-	-	-	-	-	Checksum
0x01	0x86	0x00	0x00	0x00	0x00	0x00	0x79
Je							
Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Command	Concentration	Concentration	-	-	-	-	Checksum
	(High 8 Byte)	(Low 8 Byte)					
0x86	HIGH	LOW	-	-	-	-	Checksum
	mmand Byte1 Reserved 0x01 Je Byte1 Command	Byte1Byte2ReservedCommand0x010x86JeByte1Byte1Byte2CommandConcentration (High 8 Byte)	mmandByte1Byte2Byte3ReservedCommand-0x010x860x00JeJeSyte1Byte2Byte3CommandConcentration (High 8 Byte)Concentration (Low 8 Byte)	mmandByte1Byte2Byte3Byte4ReservedCommand0x010x860x000x00JeByte1Byte2Byte3Byte4CommandConcentration (High 8 Byte)Concentration (Low 8 Byte)-	mmandByte1Byte2Byte3Byte4Byte5ReservedCommand0x010x860x000x000x00JeUPByte1Byte2Byte3Byte4Byte5CommandConcentration (High 8 Byte)Concentration (Low 8 Byte)	mmandByte1Byte2Byte3Byte4Byte5Byte6ReservedCommand0x010x860x000x000x000x00JeUP ConcentrationByte1Byte2Byte3Byte4Byte5Byte6CommandConcentrationConcentration(High 8 Byte)UP Concentration	mmandByte1Byte2Byte3Byte4Byte5Byte6Byte7ReservedCommand0x010x860x000x000x000x000x00JeUByte1Byte2Byte3Byte4Byte5Byte6Byte7CommandConcentration (High 8 Byte)Concentration (Low 8 Byte)

0x79- On/Off Self-calibration for Zero Point									
Send command-No return value									
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8	
Start Byte	Reserved	Command	-	-	-	-	-	Checksum	
0xFF	0x01	0x79	0xA0/0x00	0x00	0x00	0x00	0x00	Checksum	

Note: when byte3 is 0xa0, the auto calibration function is turned on; when byte3 is 0x00, the auto calibration function is turned off. The sensor factory default is to enable the automatic zero calibration function.

Checksum	calculation r	nethod						
Checksum =	(Negative (Byte	e1+Byte2+Byte3	+Byte4+Byt	e5+Byte6+Byte7))+	1			
For example	:							
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	Byte8
Start Byte	Reserved	Command	-	-	-	-	-	Check
								sum
0xFF	0x01	0x86	0x00	0x00	0x00	0x00	0x00	Check
								sum

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988

Email: sales@winsensor.com

Calculating Checksum:

```
1、 Add Byte 1 to Byte 7: 0x01 + 0x86 + 0x00 + 0x00 + 0x00 + 0x00 + 0x00 = 0x87
```

```
2、Negative: 0xFF - 0x87 = 0x78
```

```
3、Then+1: 0x78 + 0x01 = 0x79
```

C language

```
char getCheckSum(char *packet)
{
```

```
char i, checksum;
for( i = 1; i < 8; i++)
{
     checksum += packet[i];
}
checksum = 0xff - checksum;</pre>
```

About Zero Point Calibration

This module has **two methods** for zero point calibration: hand-operated method and self-calibration. All the zero point is at 400ppm CO2.

Hand-operated method:

Connect module's HD pin to low level(OV), lasting for 7 seconds at least. Before calibrating the zero point, please ensure that the sensor is stable for more than 20 minutes at 400ppm ambient environment.

Self-calibration function:

The self-calibration function means that after the sensor runs continuously for a period of time, it can intelligently determine the zero point according to the environmental concentration and calibrate itself. The calibration cycle is automatic calibration every 24 hours since power-on operation. The zero point of automatic calibration is 400ppm.

The self-calibration function is suitable for office environment and home environment. However, it is not suitable for agricultural greenhouses, breeding farms, cold storage and other places. In such places, self-calibration function should be turned off. After the shutdown, users are required to periodically perform zero-point detection on the sensors, and if necessary, perform zero calibration or manual zero calibration.

Notes

• Please avoid the pressure of its gilded plastic chamber from any direction, during welding, installation, and use.

• When placed in small space, the space should be well ventilated, especially for diffusion window.

- The module should be away from heat, and avoid direct sunlight or other heat radiation.
- The module should be calibrated termly, the suggested period is not longer than 6 months.
- Do not use the sensor in the high dusty environment for long time.

• To ensure the normal work, the power supply must be among $5.0V \pm 0.1V$ DC rang, the power current must be not less than 150mA. Out of this range, it will result in the failure of the sensor. (The concentration output is low, or the sensor can not work normally.)

• During the zero point calibration procedure by manual, the sensor must work in stable gas environment (400ppm) for over 20 minutes. Connect the HD pin to low level (0V) for over 7 seconds.

• Forbid using wave soldering for the sensor.

 \bullet When soldering with soldering iron, set the temperature to be (350 \pm 5) $^{\circ}$ C, and soldering time must be within 3 seconds.

• As for pin version sensor, it is recommended to use soldering socket to directly insert or remove sensors for convenient maintenance.

Tel: 86-371-67169097/67169670 Fax: 86-371-60932988 Emai

Email: <u>sales@winsensor.com</u>